


FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES

2036R Series Compact Utility Tractors

CAB

FRESH AIR FILTER - [HF235742801](#)

Clean or replace every 50 hours and as required.

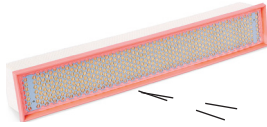


ENGINE

PRIMARY AIR FILTER - [RE68048](#)

SECONDARY AIR FILTER - [RE68049](#)

Check after every 600 hours and replace as required.

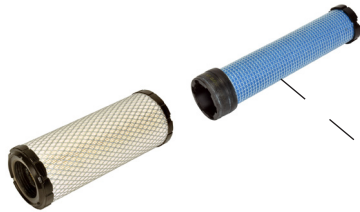

ENGINE

OIL FILTER - [M806419](#)

Replace every 200 hours or annually, whichever occurs first.
(Click here for [capacity](#))



TRANSMISSION

HYDRAULIC FILTER - [LVA16054](#)

Replace as needed.
(Click here for [capacity](#))



TRANSMISSION

OIL FILTER - [LVA14703](#)

Replace after every 400 hours change every 1200 hours or 3 years.

(Click here for [capacity](#))



ENGINE

FUEL FILTER - [MIU800645](#)

Replace every 400 hours or annually, whichever occurs first.



JOHN DEERE

Genuine Parts and Service

CAPACITIES

2036R Series Compact Utility Tractors

CAPACITIES (Approximate):

Fuel Tank:

..... 32 L (8.5 gal)

Cooling System:

Cool-Gard™ II

Open Operator Station 5.2 L (1.1 gal)

Cab 5.7 L (1.2 gal)

Crankcase with Filter:

Plus-50™ II

..... 4.3 L (1.1 gal)

Transmission and Hydraulic System:

HY-Gard™

..... 23.5 L (5.2 gal)

Front Axle:

HY-Gard™

..... 3.8 L (0.8 gal)

[Return to Filter Overview](#)

