



REPLACEMENT PARTS GUIDE

848L-II Skidder (PIN: 1DW848L__C690814—) 848L-II Skidder (PIN: 1DW848L__D690814—)



HYDRAULIC RESERVOIR BREATHER FILTER
[AT421408](#)

Interval (hrs) - 4000.



PRIMARY AIR FILTER (9.0 L ENGINES ONLY)
[AT308575](#)

Interval (hrs) - As Required.



CAB RECIRCULATING AIR FILTER ELEMENT
[AT307501](#)

Interval (hrs) - As Required.



CAB FRESH AIR FILTER ELEMENT
[AT191102](#)

Interval (hrs) - As Required.



FINAL FUEL FILTER ELEMENT
(6.8 L ENGINES ONLY)
[RE522878](#)

Interval (hrs) - 500.



AUXILIARY FUEL FILTER ELEMENT
(9.0 L ENGINES ONLY)
[AT365869](#)

Interval (hrs) - 500.



ENGINE CRANKSHAFT DAMPER
(6.8 L ENGINES ONLY)
[RE508578](#)

Interval (hrs) - 4000.



AXLE OIL FILTER ELEMENTS
[AT367635](#)

Interval (hrs) - 1000.



PRIMARY AND FINAL FUEL FILTER ELEMENT KIT (9.0 L ENGINES ONLY)
[RE525523](#)

Interval (hrs) - 500.



ENGINE OIL FILTER ELEMENT
(6.8 L ENGINES ONLY)
[RE504836](#)

Interval (hrs) - 500.



SECONDARY AIR FILTER
(9.0 L ENGINES ONLY)
[TT220747](#)

Interval (hrs) - As Required.



PRIMARY AIR FILTER (6.8 L ENGINES ONLY)
[AT223226](#)

Interval (hrs) - As Required.



ENGINE DRIVE SHAFT
(748L, 848L AND 948L ONLY)
[AT440739](#)

Interval (hrs) - 10000.



PRIMARY FUEL FILTER ELEMENT
(6.8 L ENGINES ONLY)
[RE541922](#)

Interval (hrs) - 500.



REPLACEMENT PARTS GUIDE

848L-II Skidder (PIN: 1DW848L__C690814—) 848L-II Skidder (PIN: 1DW848L__D690814—)



HYDRAULIC SYSTEM OIL FILTER ELEMENT
[F061786](#)

Interval (hrs) - 4000.



ENGINE CRANKSHAFT DAMPER
(9.0 L ENGINES ONLY)
[RE520465](#), [RE57604](#)

Interval (hrs) - 4000.



SECONDARY AIR FILTER
(6.8 L ENGINES ONLY)
[AT175224](#)

Interval (hrs) - As Required.



ENGINE DRIVE SHAFT
(640L AND 648L ONLY)
[AT440747](#)

Interval (hrs) - 10000.



DUST UNLOADER VALVE
[T158495](#)

Interval (hrs) - As Required.



ENGINE ROCKER ARM COVER GASKET
(6.8 L ENGINES ONLY)
[R524497](#)

Interval (hrs) - 2000.



PRIMARY TRANSMISSION OIL FILTER
[AT468647](#)

Interval (hrs) - 2000.



SECONDARY TRANSMISSION OIL FILTER
[T436566](#)

Interval (hrs) - 4000.



ENGINE OIL FILTER ELEMENT
(9.0 L ENGINES ONLY)
[DZ101884](#)

Interval (hrs) - 500.



ENGINE ROCKER ARM COVER GASKET
(9.0 L ENGINES ONLY)
[R527884](#)

Interval (hrs) - 500.


















AUXILIARY FUEL FILTER ELEMENT
(6.8 L ENGINE ONLY)
[AT365870](#)

Interval (hrs) - 500.

OILS AND CAPACITIES INFORMATION

848L-II Skidder (PIN: 1DW848L___C690814—) 848L-II Skidder (PIN: 1DW848L___D690814—)

Part Description	Part Number	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil (6.8 L engines only) ³ 	TY26669	24.0 L (6.3 gal)	500
John Deere Plus-50™ II Engine Oil (9.0 L engines only) ³ 	TY26669	28.5 L (7.5 gal)	500
John Deere Hy-Gard™ Oil: Front Axle Oil—1400 ³ 	TY6354	31.0 L (8.2 gal)	2000
John Deere Hy-Gard™ Oil: Rear Axle Oil—1400 ³ 	TY6354	32.0 L (8.5 gal)	2000
John Deere Hy-Gard™ Oil: Front Axle Oil—SWEDA ³ 	TY6354	31.4 L (8.3 gal)	2000
John Deere Hy-Gard™ Oil: Rear Axle Oil—SWEDA ³ 	TY6354	32.4 L (8.6 gal)	2000
John Deere Hy-Gard™ Oil: Front Axle Oil—1700 Series ³ 	TY6354	106.0 L (28.0 gal)	2000
John Deere Hy-Gard™ Oil: Rear Axle Oil—1700 Series ³ 	TY6354	107.0 L (28.3 gal)	2000
John Deere Hy-Gard™ Oil: Park Brake Oil ³ 	TY6354	0.8 L (27.0 floz)	1000
John Deere Hy-Gard™ Oil: Transmission Oil ³ 	TY6354	57.0 L (15.1 gal)	2000
John Deere Hydrau™ Oil: Hydraulic System Oil ³ 	TY27367	123.6 L (32.7 gal)	4000
John Deere Hydrau™ Oil: Winch Oil—4000 Series (if equipped) ³ 	TY27367	35.2 L (9.3 gal)	4000
John Deere Hydrau™ Oil: Winch Oil—6000 Series (if equipped) ³ 	TY27367	45.5 L (12.0 gal)	4000
John Deere Cool-Gard™ II Premix (6.8 L engines only) 	TY26575	31.4 L (8.3 gal)	6000
John Deere Cool-Gard™ II Premix (9.0 L engines only) 	TY26575	36.7 L (9.7 gal)	6000

OILS AND CAPACITIES INFORMATION

848L-II Skidder (PIN: 1DW848L___C690814—) 848L-II Skidder (PIN: 1DW848L___D690814—)

Part Description	Part Number	Qty or capacity	Change Interval In Hours
Fluid Analysis Test Kits⁴			
Diesel Engine Oil	AT346594	1	250
Transmission Oil	AT346594	1	500
Hydraulic Oil	AT346594	1	500
Axle Oil	AT346594	2	500
Park Brake Oil	AT346594	1	500
Diesel Fuel	TY27329	1	500
Winch Gear Case Oil (if equipped)	AR69444	1	500
Engine Coolant	TY27787	1	500

³See operator's manual for recommended oil type and oil viscosities based on operating temperatures.

⁴Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult an authorized John Deere dealer.

Plus-50 is a trademark of Deere & Company

Hydrau is a trademark of Deere & Company

Hy-Gard is a trademark of Deere & Company

Cool-Gard is a trademark of Deere & Company



CLICK PART NUMBER TO BUY

*See operator's manual for additional details.

Service Intervals

As Required	
<input type="checkbox"/> Clean cooler cores	<input type="checkbox"/> Fill and charge pressurized water system (if equipped)
<input type="checkbox"/> Inspect accessory drive belt	<input type="checkbox"/> Check fire extinguisher charge
<input type="checkbox"/> Replace engine air cleaner elements	<input type="checkbox"/> Lubricate cab door hinges
<input type="checkbox"/> Check tire pressure	<input type="checkbox"/> Check cab recirculating air filter
<input type="checkbox"/> Check wheel bolt torque	<input type="checkbox"/> Check cab fresh air filter
<input type="checkbox"/> Clean fuel tank inlet screen	
Every 10 Hours or Daily	
<input type="checkbox"/> Check engine coolant level	<input type="checkbox"/> Check and clean engine air intake precleaner dust unloader valve
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Lubricate articulation points
<input type="checkbox"/> Check transmission oil level	<input type="checkbox"/> Lubricate yoke and cross head (grapple skidders only)
<input type="checkbox"/> Check hydraulic system oil level	<input type="checkbox"/> Lubricate tong linkage and cylinder pivots (grapple skidders only)
<input type="checkbox"/> Check and drain primary fuel filter and water separator	<input type="checkbox"/> Lubricate arch/boom linkage and cylinder pivots (grapple skidders only)
<input type="checkbox"/> Check and drain auxiliary fuel filter and water separator	<input type="checkbox"/> Lubricate winch fairlead rollers (cable skidders only)
<input type="checkbox"/> Clean engine air intake precleaner screen	
Every 100 Hours	
<input type="checkbox"/> Lubricate rear axle pinion seal and park brake seals	<input type="checkbox"/> Lubricate blade and cylinder pivots
<input type="checkbox"/> Lubricate front axle pivots, pinion seal, and hydraulic steering cylinder pins	<input type="checkbox"/> Lubricate winch fairlead rollers (if equipped, grapple skidders only)
Every 250 Hours	
<input type="checkbox"/> Take engine oil sample	
Initial Service—500 Hours	
<input type="checkbox"/> Drain and refill axle oil	<input type="checkbox"/> Replace axle oil filters
Every 500 Hours	
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Remove and clean open crankcase ventilation (OCV) hose
<input type="checkbox"/> Inspect engine crankshaft damper (9.0 L engines only)	<input type="checkbox"/> Check engine air intake hoses
<input type="checkbox"/> Replace primary fuel filter and water separator	<input type="checkbox"/> Take transmission oil sample
<input type="checkbox"/> Replace auxiliary fuel filter and water separator	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Replace final fuel filter	<input type="checkbox"/> Take axle oil sample
<input type="checkbox"/> Check axle oil level	<input type="checkbox"/> Take park brake oil sample
<input type="checkbox"/> Check park brake oil level	<input type="checkbox"/> Take engine coolant sample
<input type="checkbox"/> Lubricate front, rear, and articulation drive shafts	<input type="checkbox"/> Take diesel fuel sample
<input type="checkbox"/> Adjust grapple damper (grapple skidders only)	
Every 1000 Hours	
<input type="checkbox"/> Drain and refill park brake oil	<input type="checkbox"/> Lubricate grapple rotate bearing (grapple skidders only)
<input type="checkbox"/> Replace axle oil filters	<input type="checkbox"/> Check coolant condition

Service Intervals

Initial Service—2000 Hours	
<input type="checkbox"/> Replace hydraulic system oil filter	
Every 2000 Hours	
<input type="checkbox"/> Drain and refill transmission oil and replace primary transmission oil filter	<input type="checkbox"/> Check and adjust engine valve lash
<input type="checkbox"/> Drain and refill axle oil	<input type="checkbox"/> Inspect sun gear (1700 series axles equipped with large duals only)
<input type="checkbox"/> Inspect engine crankshaft damper (6.8 L)	<input type="checkbox"/> Replace fuel tank breather
Every 4000 Hours	
<input type="checkbox"/> Drain and refill hydraulic system oil	<input type="checkbox"/> Drain and refill winch oil (if equipped)
<input type="checkbox"/> Replace hydraulic system oil filter	<input type="checkbox"/> Replace secondary transmission oil filter
<input type="checkbox"/> Replace hydraulic reservoir breather filter	<input type="checkbox"/> Replace engine crankshaft damper
Every 6000 Hours	
<input type="checkbox"/> Drain and refill engine cooling system	
Every 10 000 Hours	
<input type="checkbox"/> Replace engine drive shaft	