


# REPLACEMENT PARTS GUIDE

## 870G and 870GP (PIN: 1DW870G\_\_\_F678818—680877)

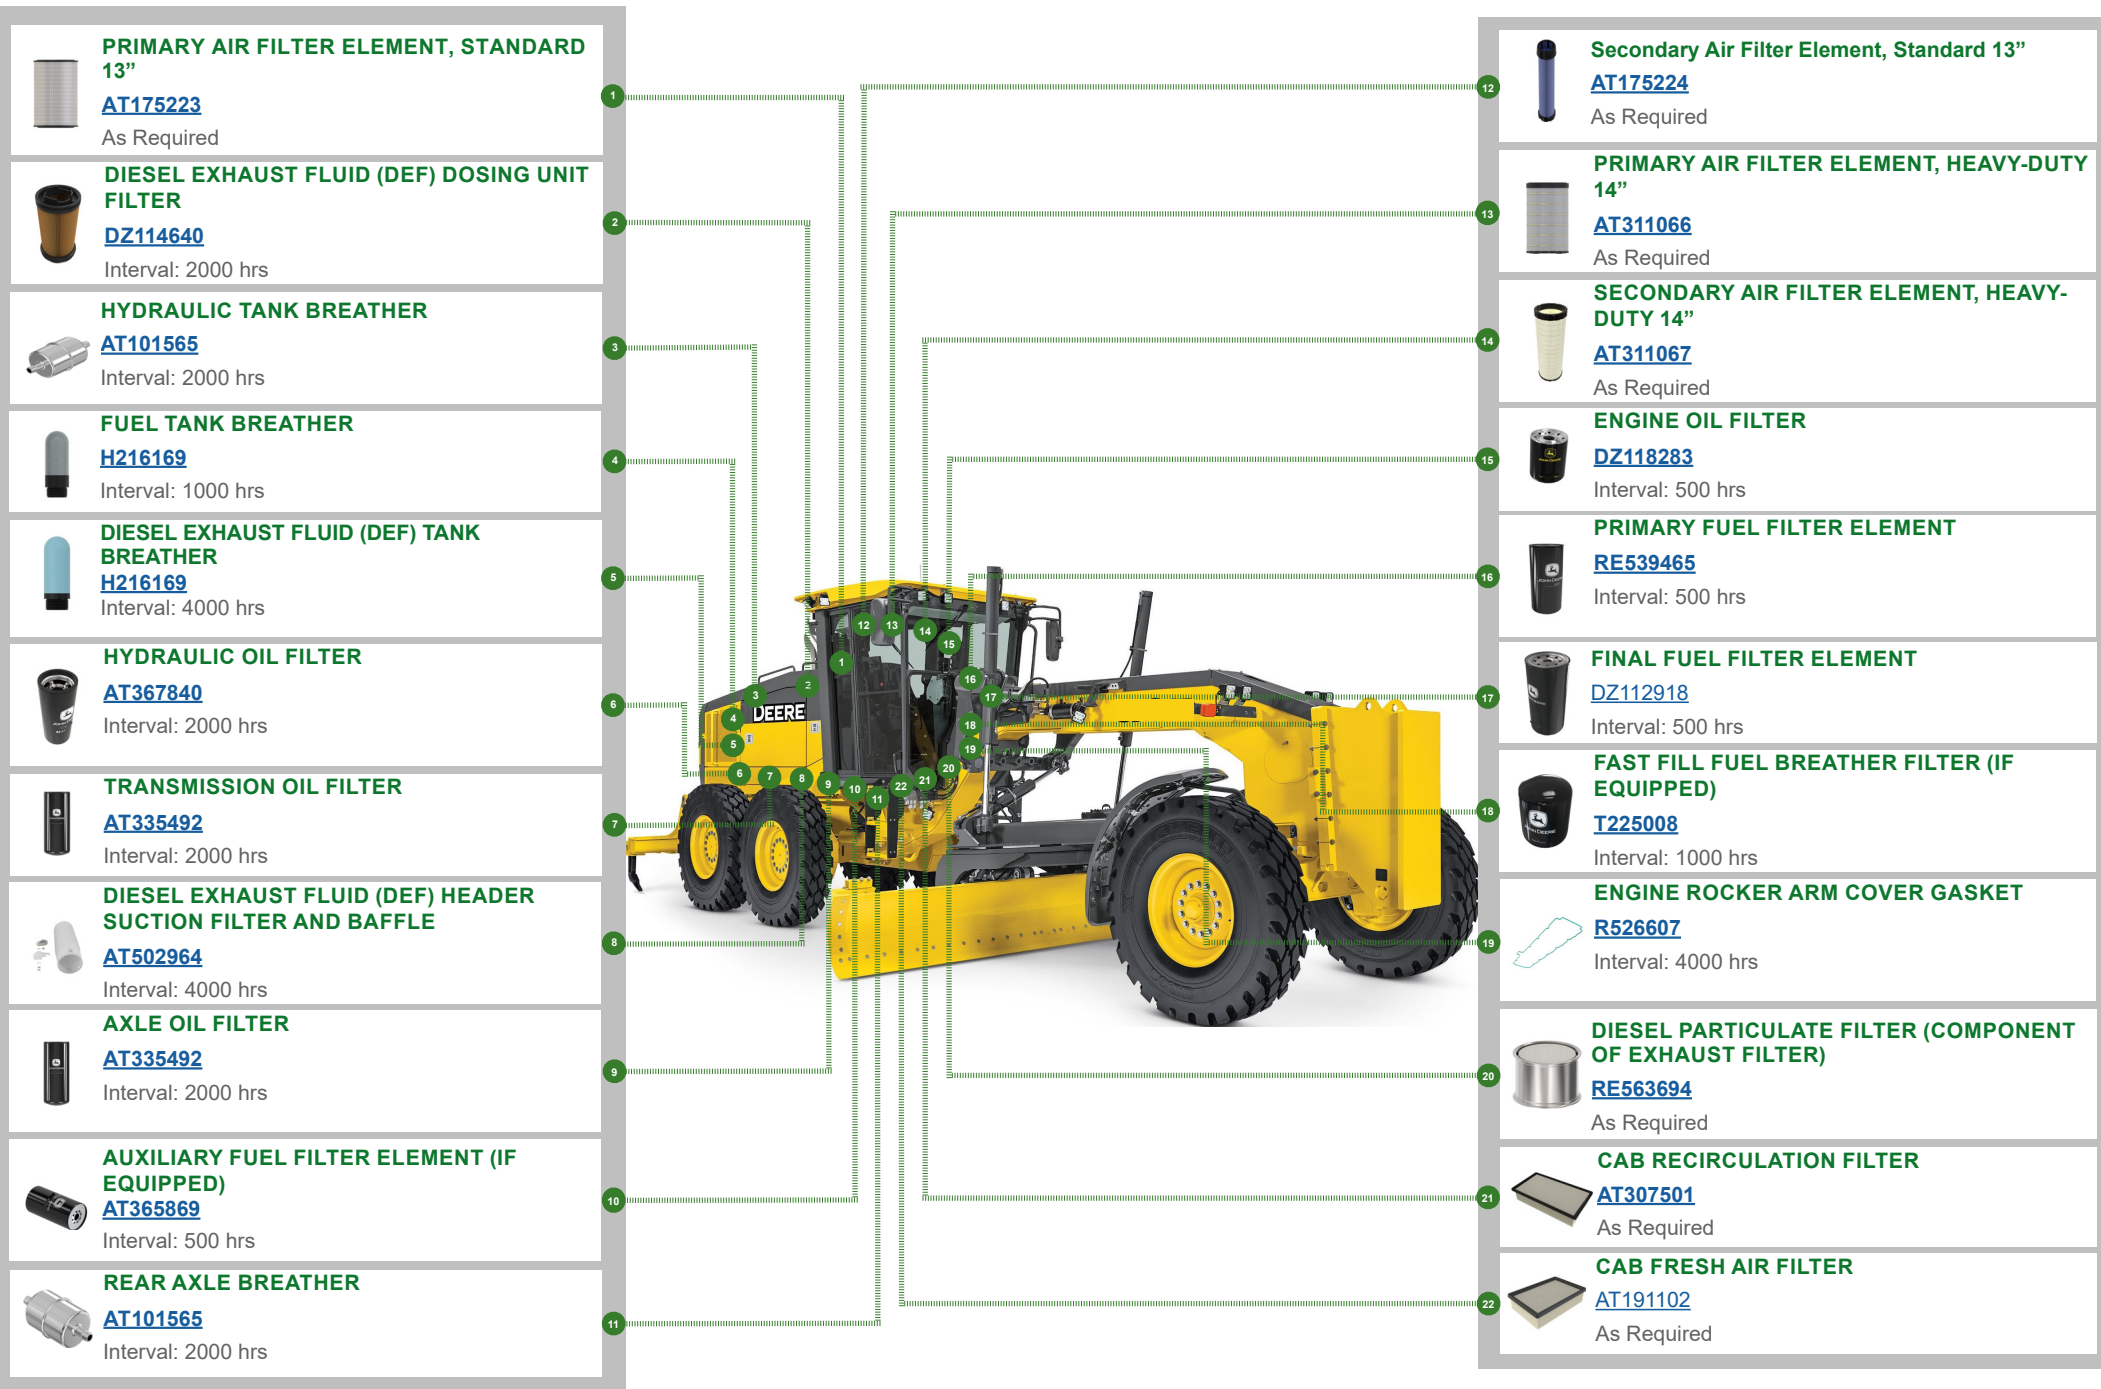

**PRIMARY AIR FILTER ELEMENT, STANDARD 13"**

[AT175223](#)

As Required

**DIESEL EXHAUST FLUID (DEF) DOSING UNIT FILTER**

[DZ114640](#)

Interval: 2000 hrs

**HYDRAULIC TANK BREATHER**

[AT101565](#)

Interval: 2000 hrs

**FUEL TANK BREATHER**

[H216169](#)

Interval: 1000 hrs

**DIESEL EXHAUST FLUID (DEF) TANK BREATHER**

[H216169](#)

Interval: 4000 hrs

**HYDRAULIC OIL FILTER**

[AT367840](#)

Interval: 2000 hrs

**TRANSMISSION OIL FILTER**

[AT335492](#)

Interval: 2000 hrs

**DIESEL EXHAUST FLUID (DEF) HEADER SUCTION FILTER AND BAFFLE**

[AT502964](#)

Interval: 4000 hrs

**AXLE OIL FILTER**

[AT335492](#)

Interval: 2000 hrs

**AUXILIARY FUEL FILTER ELEMENT (IF EQUIPPED)**

[AT365869](#)

Interval: 500 hrs

**REAR AXLE BREATHER**

[AT101565](#)

Interval: 2000 hrs

**Secondary Air Filter Element, Standard 13"**

[AT175224](#)

As Required

**PRIMARY AIR FILTER ELEMENT, HEAVY-DUTY 14"**

[AT311066](#)

As Required

**SECONDARY AIR FILTER ELEMENT, HEAVY-DUTY 14"**

[AT311067](#)

As Required

**ENGINE OIL FILTER**

[DZ118283](#)

Interval: 500 hrs

**PRIMARY FUEL FILTER ELEMENT**

[RE539465](#)

Interval: 500 hrs

**FINAL FUEL FILTER ELEMENT**

[DZ112918](#)

Interval: 500 hrs

**FAST FILL FUEL BREATHER FILTER (IF EQUIPPED)**

[T225008](#)

Interval: 1000 hrs

**ENGINE ROCKER ARM COVER GASKET**

[R526607](#)

Interval: 4000 hrs

**DIESEL PARTICULATE FILTER (COMPONENT OF EXHAUST FILTER)**

[RE563694](#)

As Required

**CAB RECIRCULATION FILTER**

[AT307501](#)

As Required

**CAB FRESH AIR FILTER**

[AT191102](#)







As Required



**JOHN DEERE**  
Genuine Parts and Service

# PARTS AND CAPACITIES INFORMATION

## 870G and 870GP (PIN: 1DW870G\_\_\_F678818—680877)

Part Description	Part Number	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil <sup>2</sup> 	<a href="#">TY26674</a>	28.4 L (7.5 gal)	500
John Deere Hydrau™ Hydraulic Oil <sup>2</sup> 	<a href="#">TY27316</a>	60.5 L (16.0 gal)	4000
John Deere Hy-Gard™6WD Hub Oil <sup>2</sup> (if equipped) (each) 	<a href="#">TY6354</a>	7.2 L (2.0 gal)	1000
John Deere Hy-Gard™ Transmission, Axle, Circle Gear Case and Tandem Oil <sup>2</sup> 	<a href="#">TY6354</a>	67.2 L (17.8 gal)	2000
John Deere Cool-Gard™ II Pre-Mix 	<a href="#">TY26575</a>	55.0 L (14.5 gal)	6000
John Deere Cool-Gard™ II Pre-Mix 	<a href="#">TY26575</a>	55.0 L (14.5 gal)	6000

# PARTS AND CAPACITIES INFORMATION

## 870G and 870GP (PIN: 1DW870G\_\_\_F678818—680877)

Part Description	Part Number	Qty or capacity	Change Interval In Hours
<b>Fluid Analysis Test Kits<sup>3</sup></b>			
Diesel Engine Oil	<a href="#">AT346594</a>	1	250
Transmission Oil	<a href="#">AT346594</a>	1	500
Axle Oil	<a href="#">AT346594</a>	1	500
Tandem Oil	<a href="#">AT346594</a>	2	500
Hydraulic Oil	<a href="#">AT346594</a>	1	500
6WD Hub Oil (if equipped)	<a href="#">AT346594</a>	2	500
Diesel Fuel	<a href="#">TY27329</a>	1	500
Engine Coolant	<a href="#">TY26873</a>	1	500

<sup>1</sup>Perform initial service once after the first 500 hours of operation.

<sup>2</sup>See operator's manual for recommended oil type and oil viscosities based on operating temperatures.

<sup>3</sup>Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult an authorized John Deere dealer.

*Plus-50 is a trademark of Deere & Company*

*Hydrau is a trademark of Deere & Company*

*Hy-Gard is a trademark of Deere & Company*

*Cool-Gard is a trademark of Deere & Company*

## Service Intervals

As Required	
<input type="checkbox"/> Service exhaust filter	<input type="checkbox"/> Inspect accessory belt and belt tensioner spring
<input type="checkbox"/> Clean cooler cores	<input type="checkbox"/> Replace engine air intake filter elements
<input type="checkbox"/> Clean and tighten battery terminals	<input type="checkbox"/> Drain fuel tank sump
<input type="checkbox"/> Clean battery compartment	<input type="checkbox"/> Drain primary fuel filter and water separator
<input type="checkbox"/> Clean or replace cab fresh air and cab recirculation filters	<input type="checkbox"/> Drain auxiliary fuel filter and water separator (if equipped)
<input type="checkbox"/> Lubricate circle pinion	<input type="checkbox"/> Check rear camera (if equipped)
<input type="checkbox"/> Check tire pressure	<input type="checkbox"/> Transmission control unit (TCU) calibration
<input type="checkbox"/> Check blade circle and draft frame wear inserts	<input type="checkbox"/> 6WD controller calibration (if equipped)
<input type="checkbox"/> Check blade lift cylinder sockets	<input type="checkbox"/> Cross slope sensors calibration (if equipped)
<input type="checkbox"/> Lubricate saddle locking pin holes	<input type="checkbox"/> Hydraulic valves calibration (if equipped)
<input type="checkbox"/> Blade sideshift wear insert adjustment	<input type="checkbox"/> Replace starting fluid cylinder (if equipped)
Every 10 Hours or Daily	
<input type="checkbox"/> Check hydraulic tank oil level	<input type="checkbox"/> Check engine oil level
<input type="checkbox"/> Check transmission oil level	<input type="checkbox"/> Check engine coolant level in surge tank
Every 50 Hours	
<input type="checkbox"/> Lubricate frame hinge pivots	<input type="checkbox"/> Lubricate front axle lean bar pivot
<input type="checkbox"/> Lubricate lift cylinders	<input type="checkbox"/> Lubricate front axle steering pin
<input type="checkbox"/> Lubricate draft frame ball	<input type="checkbox"/> Lubricate tie rod ends
<input type="checkbox"/> Lubricate front mounted scarifier or dozer blade (if equipped)	<input type="checkbox"/> Lubricate steering cylinders
<input type="checkbox"/> Lubricate Balderson™ style front lift group (if equipped)	<input type="checkbox"/> Lubricate midmount scarifier (if equipped)
<input type="checkbox"/> Lubricate front axle oscillation pin	<input type="checkbox"/> Lubricate circle sideshift cylinder
<input type="checkbox"/> Lubricate front axle lean pivot casting pins	<input type="checkbox"/> Lubricate saddle locking pin
Every 250 Hours	
<input type="checkbox"/> Check battery electrolyte level and terminals	<input type="checkbox"/> Take engine oil sample
Initial Service—500 Hours <sup>1</sup>	
<input type="checkbox"/> Replace axle oil filter	<input type="checkbox"/> Replace transmission oil filter
Every 500 Hours	
<input type="checkbox"/> Check axle oil level	<input type="checkbox"/> Replace primary fuel filter and water separator
<input type="checkbox"/> Check tandem oil level	<input type="checkbox"/> Replace auxiliary fuel filter and water separator (if equipped)
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Drain and refill engine oil (quick service) (if equipped)	<input type="checkbox"/> Take transmission oil sample
<input type="checkbox"/> Check receiver-dryer moisture indicator	<input type="checkbox"/> Take axle oil sample
<input type="checkbox"/> Check circle gear case oil level	<input type="checkbox"/> Take tandem oil sample
<input type="checkbox"/> Check 6WD hub oil level (if equipped)	<input type="checkbox"/> Take 6WD hub oil sample (if equipped)
<input type="checkbox"/> Lubricate tandem pivots	<input type="checkbox"/> Take engine coolant sample
<input type="checkbox"/> Check brake accumulator	<input type="checkbox"/> Take diesel fuel sample
<input type="checkbox"/> Replace final fuel filter	
Every 1000 Hours	
<input type="checkbox"/> Drain and refill 6WD hub oil (if equipped)	<input type="checkbox"/> Check engine air intake hoses
<input type="checkbox"/> Adjust front wheel bearings (standard axle only)	<input type="checkbox"/> Check coolant condition
<input type="checkbox"/> Replace fast fill fuel breather filter (if equipped)	<input type="checkbox"/> Replace fuel tank breather

## Service Intervals

Every 2000 Hours	
<input type="checkbox"/> Drain and refill axle oil	<input type="checkbox"/> Clean engine crankcase ventilation tube
<input type="checkbox"/> Drain and refill transmission oil	<input type="checkbox"/> Replace axle oil filter
<input type="checkbox"/> Drain and refill transmission oil (quick service) (if equipped)	<input type="checkbox"/> Replace hydraulic oil filter
<input type="checkbox"/> Replace rear axle breather filter and hydraulic tank breather filter	<input type="checkbox"/> Replace transmission oil filter
<input type="checkbox"/> Drain and refill circle gear case oil	<input type="checkbox"/> Replace 6WD hydraulic oil filter (672, 772, and 872)
<input type="checkbox"/> Check and adjust engine valve lash	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) dosing unit filter
Every 4000 Hours	
<input type="checkbox"/> Drain and refill hydraulic tank oil	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) breather
<input type="checkbox"/> Drain and refill hydraulic tank oil (quick service) (if equipped)	<input type="checkbox"/> Clean diesel exhaust fluid (DEF) tank
<input type="checkbox"/> Drain and refill tandem oil	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) header suction filter
<input type="checkbox"/> Clean transmission pump inlet screen	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) baffle
Every 6000 Hours	
<input type="checkbox"/> Drain, flush, and refill cooling system	<input type="checkbox"/> Drain, flush, and refill cooling system (quick service) (if equipped)